

AT 2500 Wired Remote

There are two dip switches on the button PCB accessed by removing the two screws on the bottom panel.

SW 1 enables or disables the Green FREE CREDIT button.

SW2 enables or disables the POWER button.

The remote is shipped with both switches on, which enables both features. These features can also be disabled via jukebox software.

You will be connecting to your jukebox using the six pin connector on the right side of the AT2500 box. This connector is compatible with the six pin cable originally supplied with the Rock-ola digital jukeboxes.

Custom cables and connectors are available.